

ONE FOR ALL

Support mural pour
écran plat

WM 4471


MANUEL D'UTILISATION










Besoin d'aide ?

Rendez-vous sur votre communauté <https://sav.darty.com>



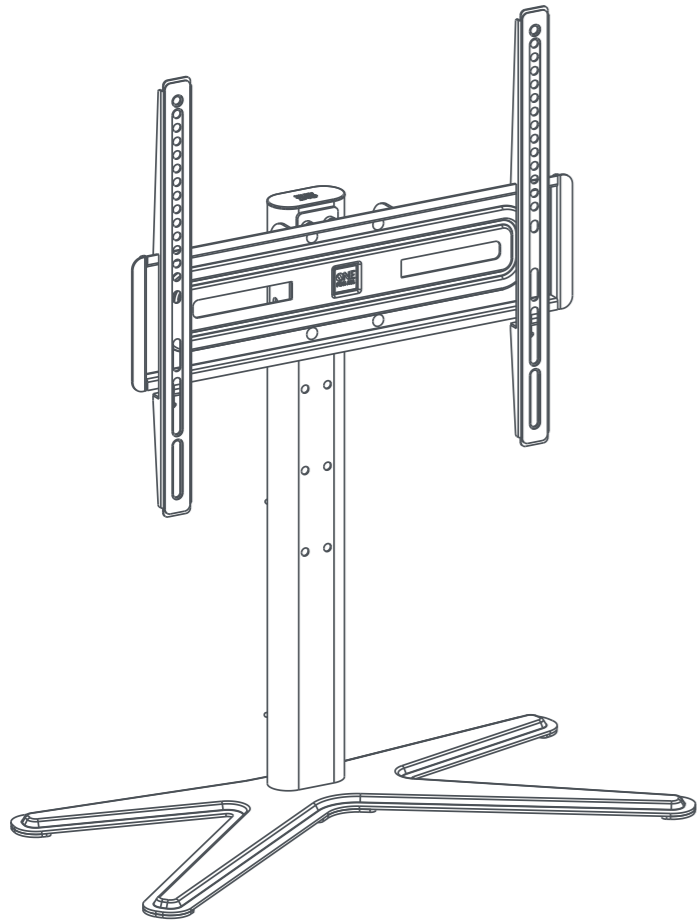

START

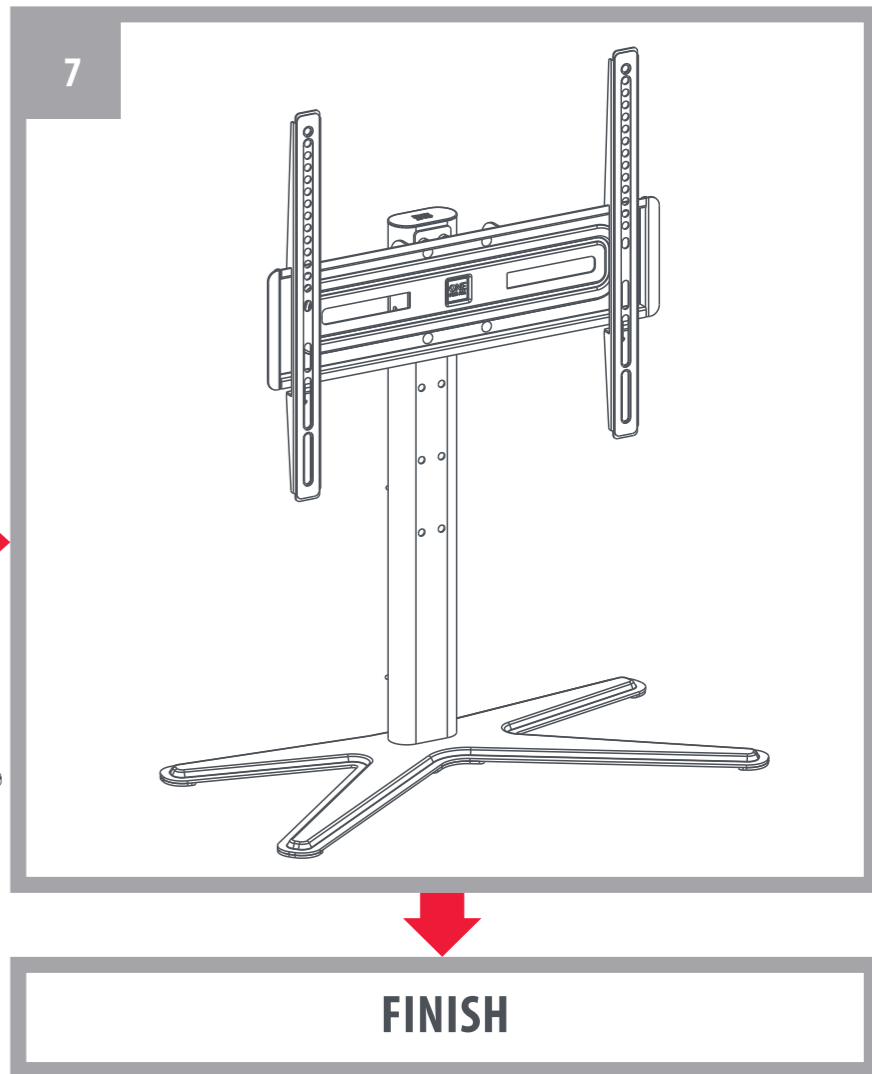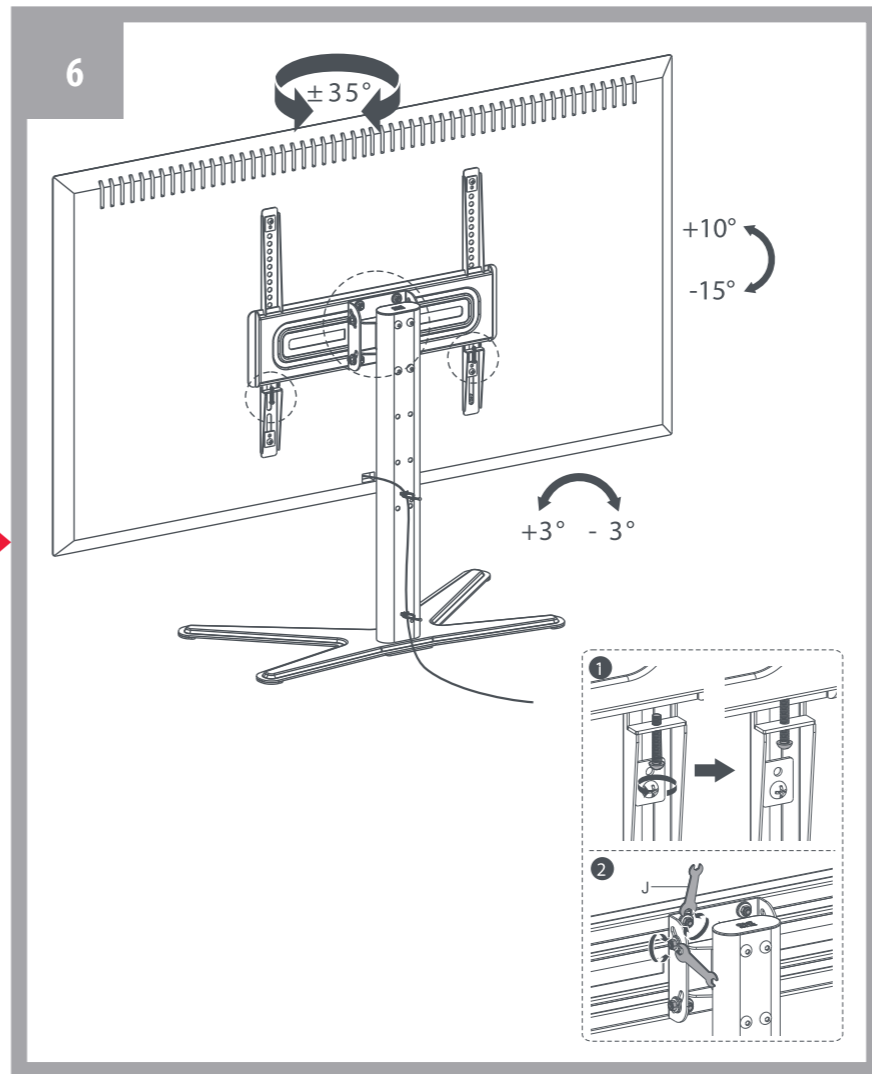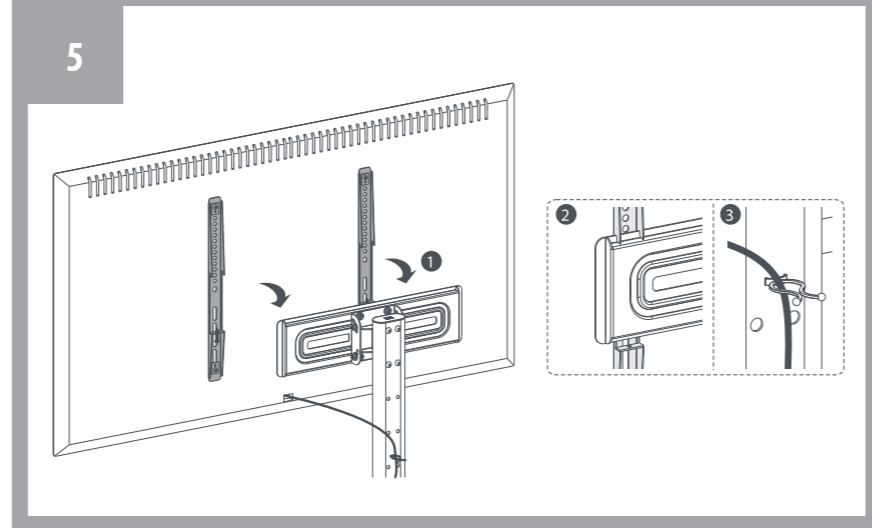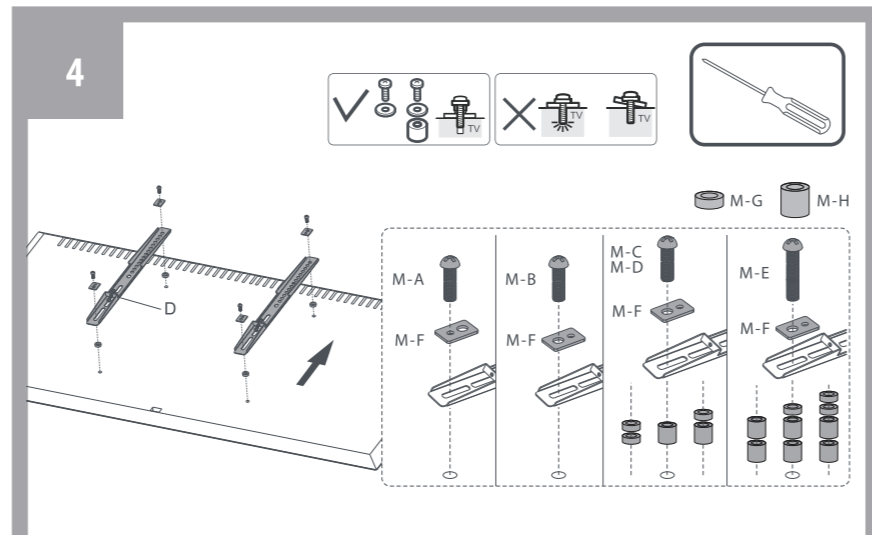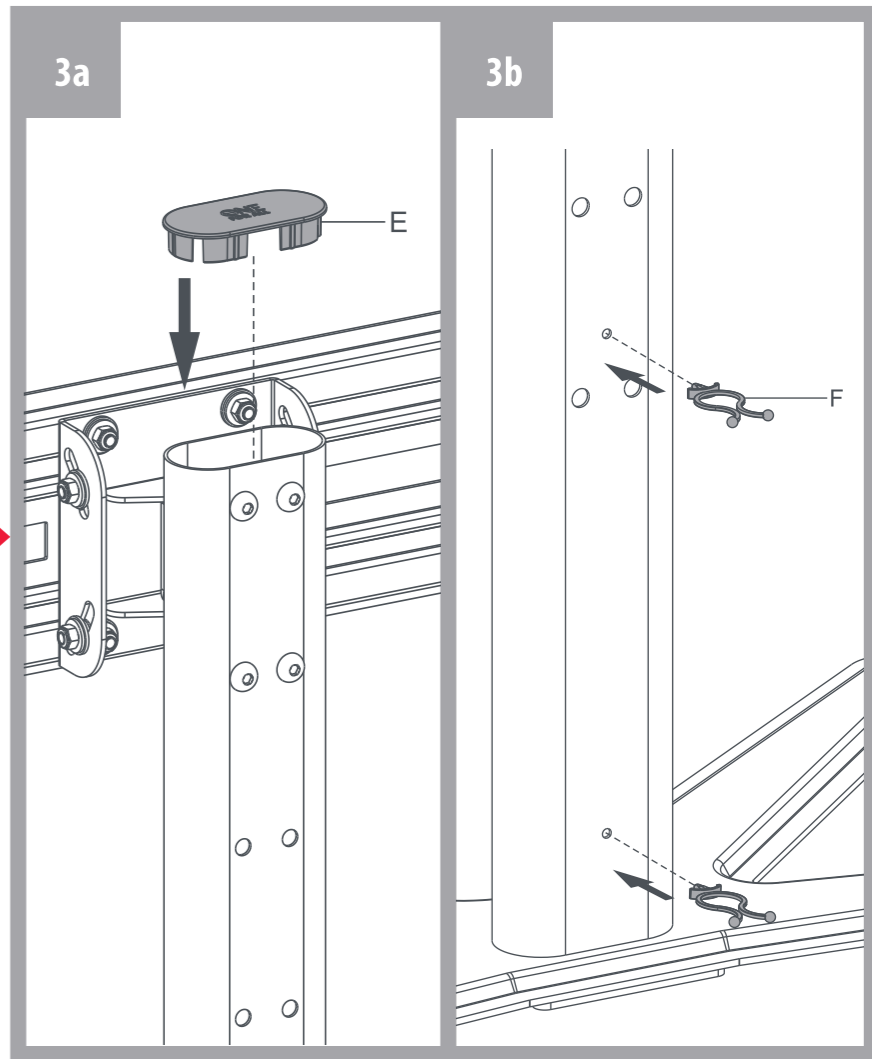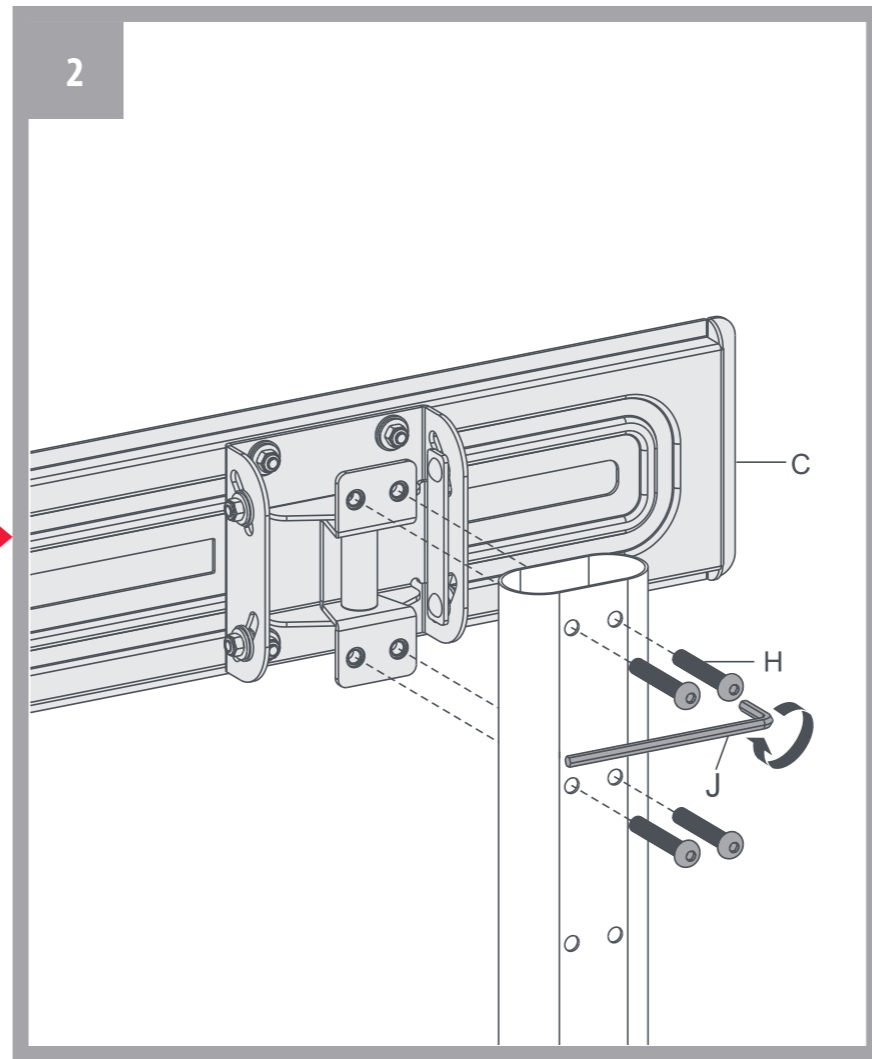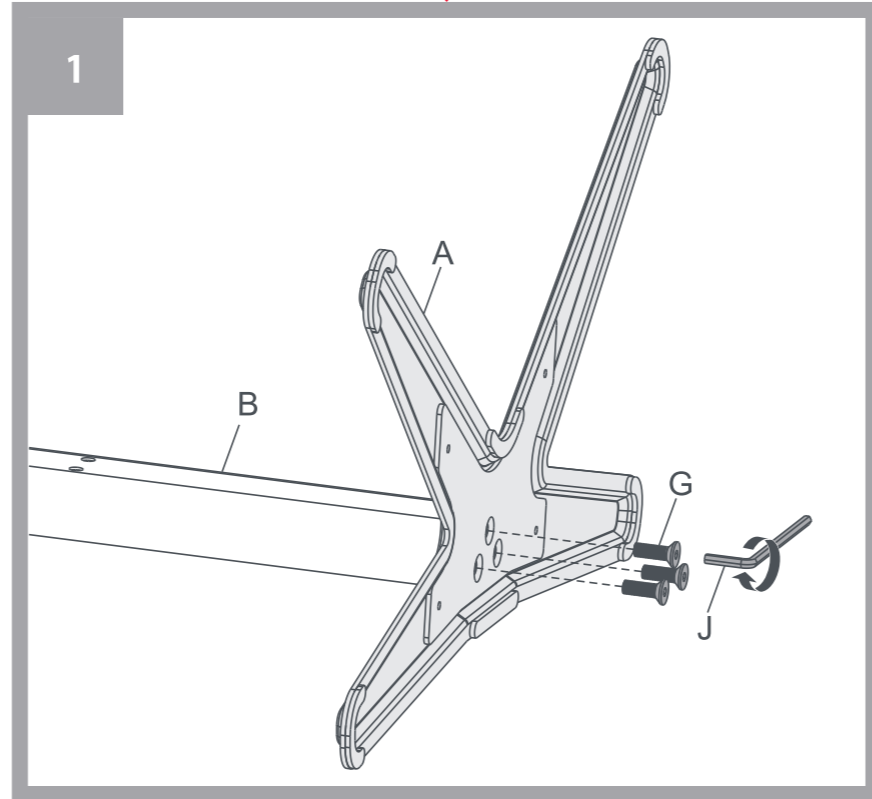

FINISH

- A (x1)
- B (x1)
- C (x1)
- D (x2)
- E (x1)
- F (x2)
- M8x25 (x3) G
- M8x50 (x4) H
- I (x1)
- J (x1)
- M5x14 (x4) M-A
- M6x14 (x4) M-B
- M6x30 (x4) M-C
- M8x30 (x4) M-D
- M8x50 (x4) M-E
- (x4) M-F
- (x8) M-G
- (x8) M-H